


NOTES:

- ① CUT WCO07 - 8 COND. PHONE CABLE - TO 30"
- ② INSTALL STRAIN RELIEF FOR JH006 - DB15 HOOD 1/4" FROM END OF CABLE.
- ③ USE AMP TOOL # 1-232652-0 TO INSTALL JAB08 - TELCO B CONNECTOR
4. PAGE 2 OF DRAWING IS CABLE TEST SIGNATURE.

REV	DESCRIPTION	DATE
A	RELEASE DRAWING	3/8/93 JB

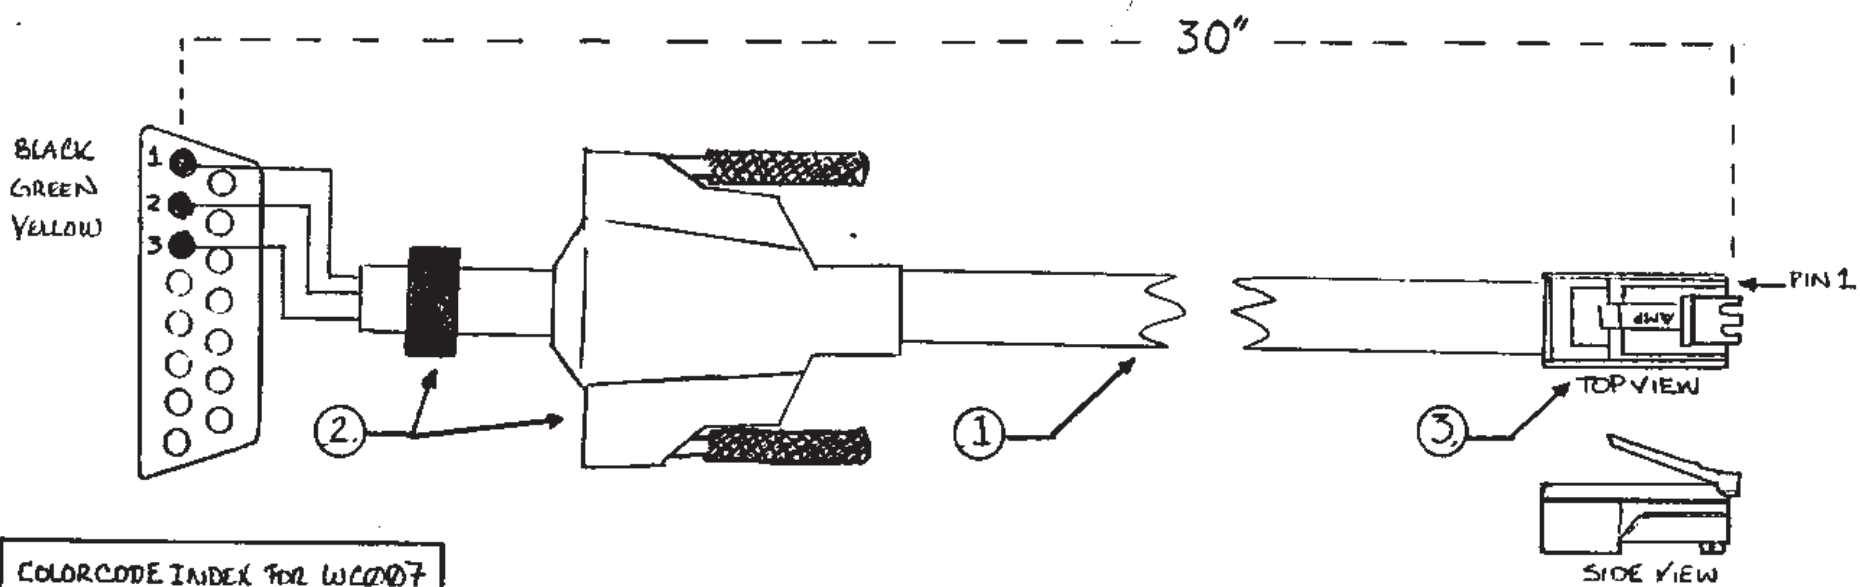

T-B PIN #	WIRE COLOR
1	BLUE
2	BROWN
3	YELLOW
4	GREEN
5	RED
6	BLACK
7	ORANGE
8	WHITE

T-B	DB-15P
3 YLW	3
4 GRN	2
6 BLK	1

- Brown - 1
- BLUE - 2
- YLLW - 3 ✓
- GRN - 4 ✓
- RED - 5
- BLK - 6 ✓
- ORNG - 7
- GREY - 8

VISUAL DATABASE SYSTEMS		
PART NUMBER: AC001		
DESC: SBZ P15 (4200) PLAYER CABLE		PAGE 1 of 2
REV: A	DATE: 3/8/93	BY: JB